

# TAFFIO® XY-IPS13 Quickguide

#### **Installation**

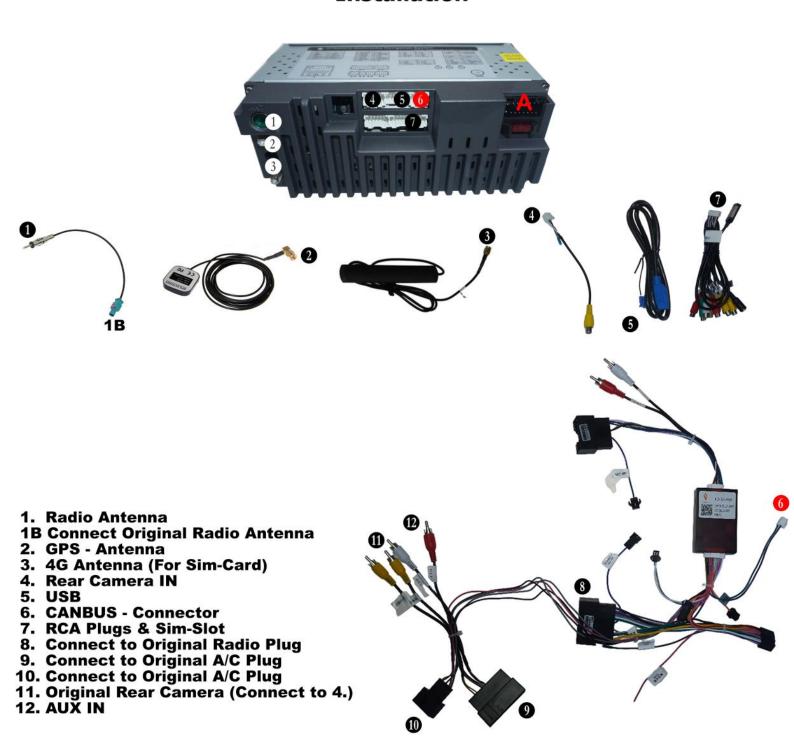


### A/C Connection


1. Unscrew the 4 screws and unmount back cover

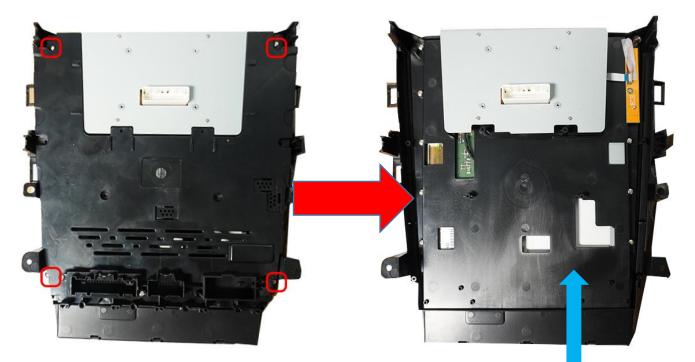


2. Unmount AC board from Original Display and place it on Android Display

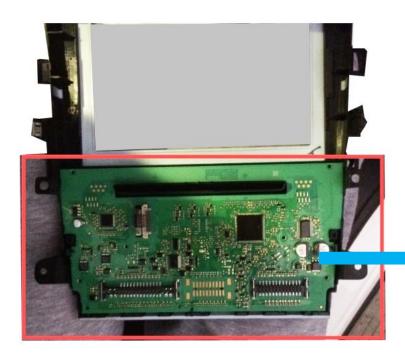

### 3. Mount Backcover again and plug in AC Plugs

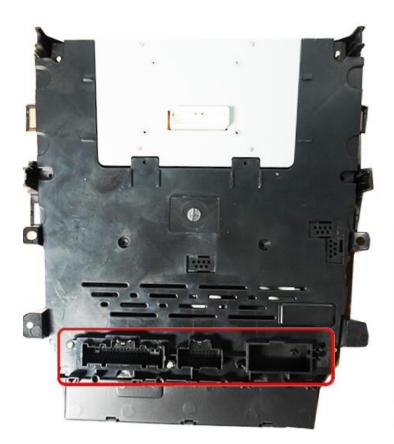

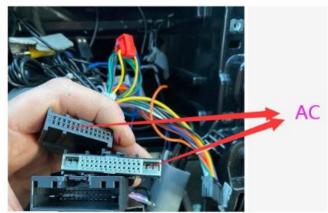

## Original Rear Camera Connection

